

Baby.i Twinkle Melody

User Manual




Getting Started

Thank you for choosing the [Baby.i Twinkle Melody](#) connected with Bluetooth. [Baby.i Twinkle Melody](#) is a kind of Bluetooth Low-energy product based on the Bluetooth 4.2 version. It is portable and can be interacted with baby, and linked up smartphones through specified app within a setting Bluetooth connection. [Baby.i Twinkle Melody](#) can measure and record the baby's emotional data and environment temperature, parents can monitor those data through smartphone after connection. [Twinkle Melody app](#) provides the notifications of baby crying and comfort zone alert.

Included:

- Main Device
- Baby bed mount accessory
- User manual x 1 sheet

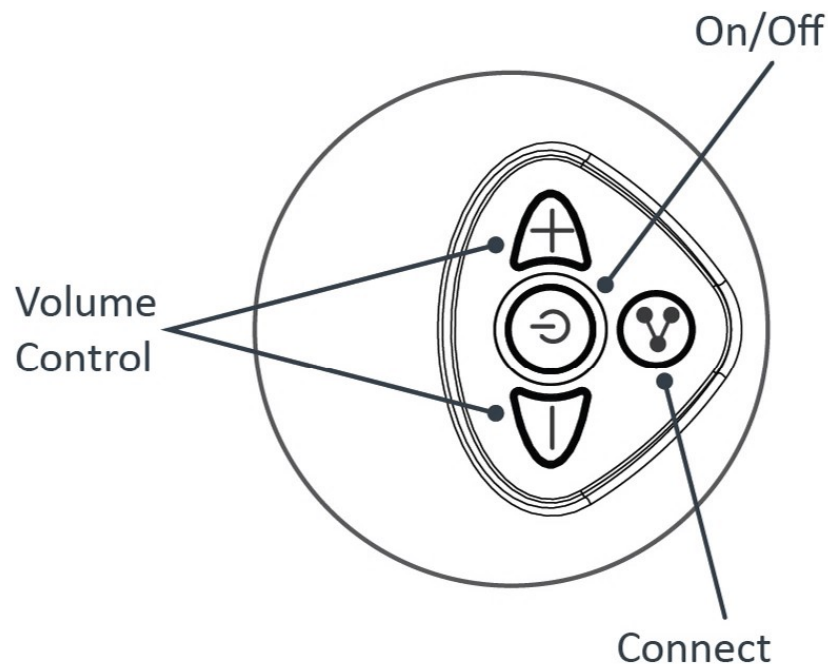

Switch on/off

Switch on: Press the on/off button, then pat the device until you see the light & music are both on.
Switch off: Press the on/off button.


Disconnection Mode:

Baby.i Twinkle Melody allows interaction with baby without bluetooth connection.

1. Pat it to play fun music with lighting effect.
2. **Baby.i Twinkle Melody** can detect baby crying and play calming music & mood light to soothe baby.


Connection Mode:

Twinkle Melody App

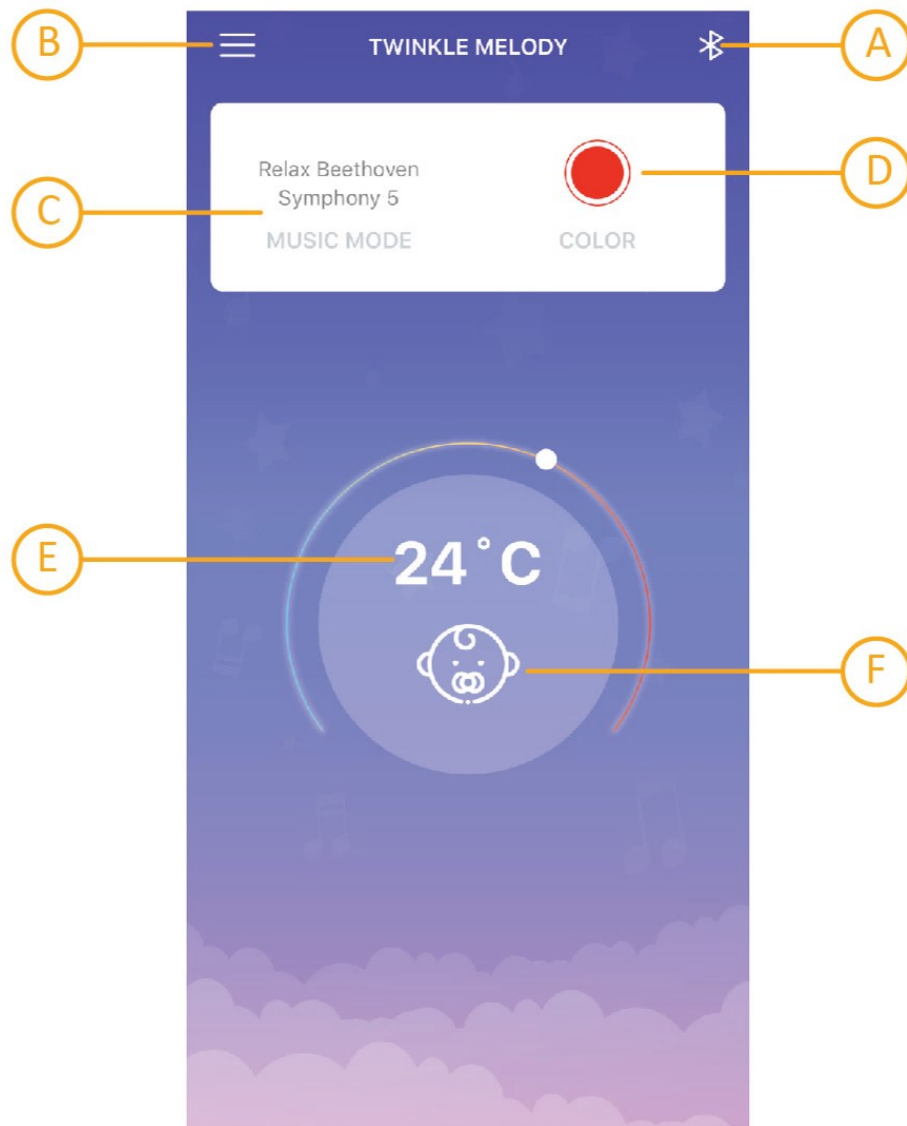


A: Connection

1. Switch on **Baby.i Twinkle Melody** and turn on your smartphone Bluetooth.
2. Open the **Twinkle Melody app** and press connection button.
3. Click the connect button to connect the device.

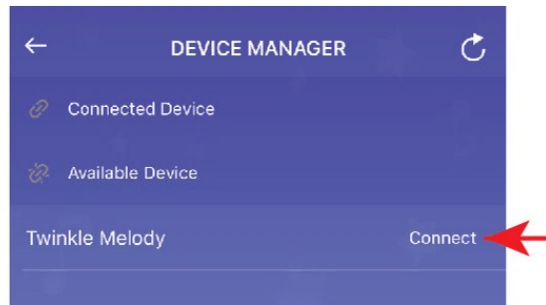

B: Main Menu

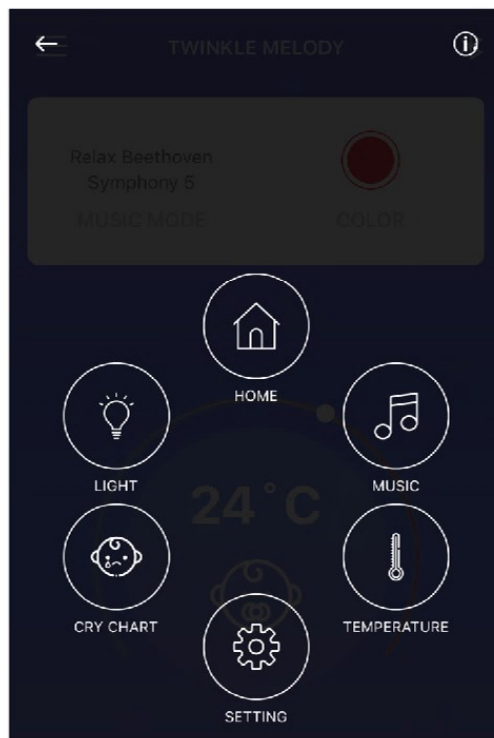

HOME - Home page

LIGHT - DIY mood light

MUSIC - 4 professional music program

CRY CHART - Baby emotional analysis


TEMPERATURE - Comfort zone data

SETTING - Idle time to sleep and alert setting

 - Information link


C: Professional Music Programme

4 types of music to fullfill the needs of baby growth. (Accompany, Fun, Enlightenment and Playful)

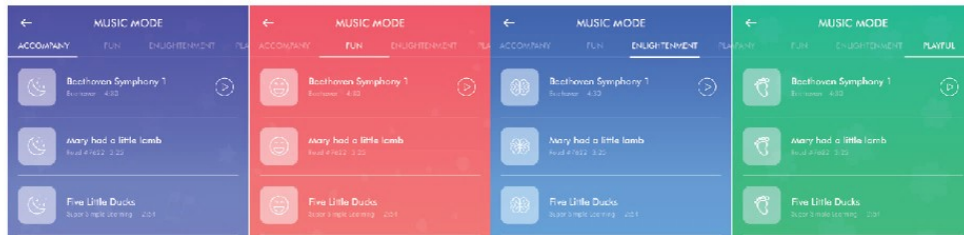

D: DIY Mood Light

Through the app to play the lighting effects. 23 patterns of lighting effect and DIY color picker for user to select.

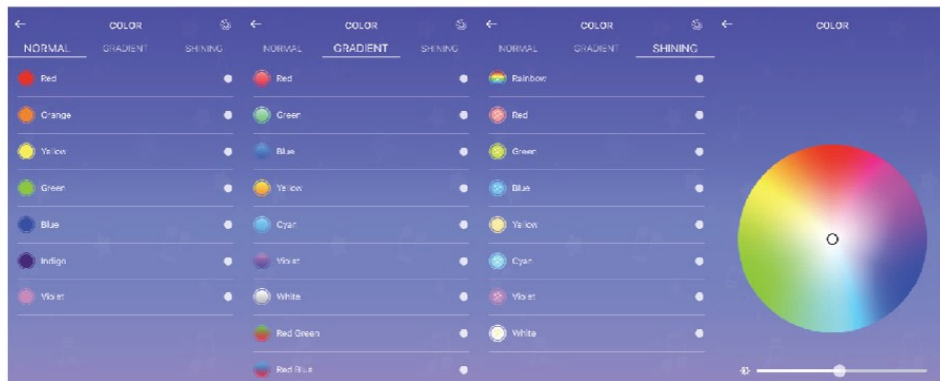

E: Comfort Zone Data

- Device can record environmental temperature. (fig.1)
- Parents can read the past data. (fig.2)

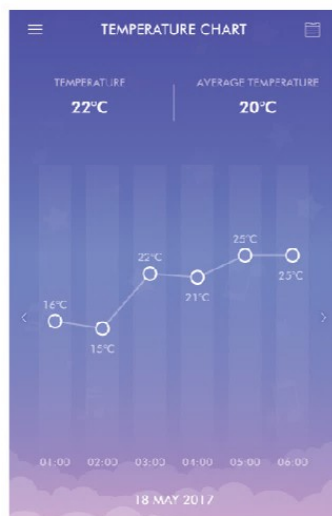


fig.1

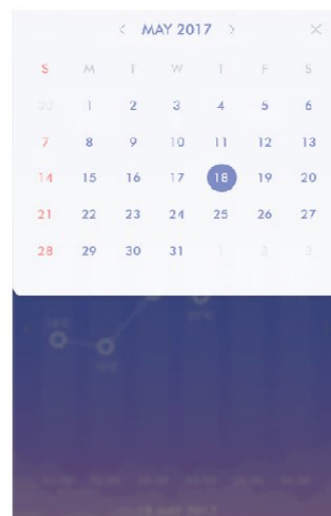


fig.2

F: Baby Emotional Data

- Device can record baby crying data and analysis. (fig.3)
- Parents can read the past data. (fig.4)

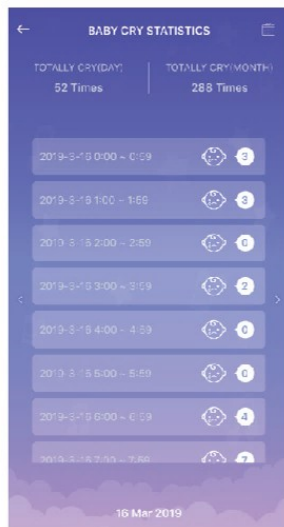


fig.3

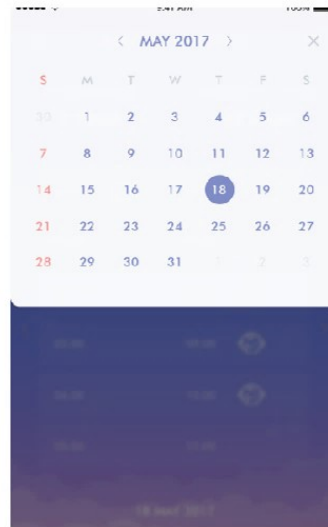



fig.4

SETTING




Comfort Zone Alert

- Parents can turn on/off the comfort zone alert in app setting. ***Low battery may not record the data.

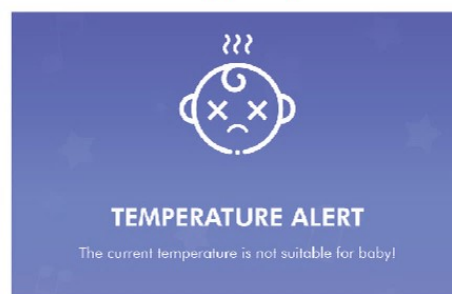


Crying Alert

- Parents can turn on/off the crying alert in app setting. ***Low battery may not record the data.

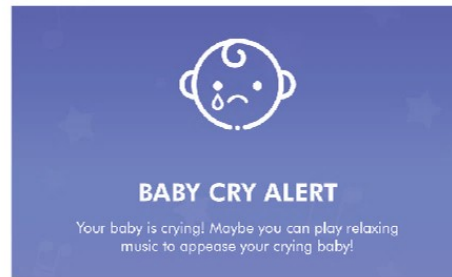

Idle Time To Sleep

- Parents can turn on/off the timer.
- Set the idle time to sleep and then disconnect with smartphone, device will repeat to play the selected music only until to idle time out.
- Set the idle time to sleep, device will play the music until to idle time out.

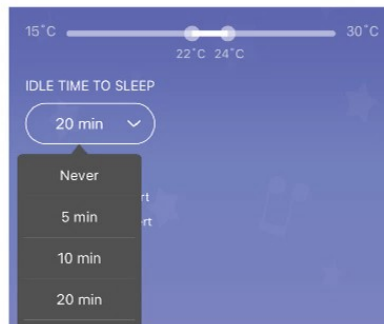

Attention: If you run the Twinkle Melody app in backend operation, ie launch another apps or lock the device, the app may not be able to wake up and display the (temperature / cry) alert, and idle time to sleep at right time. This is due to iOS protection against draining system resources or Android authority limitation. We strongly recommend to keep the app in active state when monitoring and alert function is necessary.

Battery

- AAA battery x 3

Twinkle Melody App

App can be downloaded from:



Search "Twinkle Melody"

Thank You

www.innohub-iproduction.com

